

PC43d

Power Adapter Base Instructions

電源适配器基座说明

電源配接器基座說明

Instructions d'installation du socle de batterie

Installationsanleitung für Akkuhalterung

Petunjuk untuk Tempat Adaptor Listrik

Istruzioni per l'uso della base adattatore di corrente

전원 어댑터 거치대 안내서

Instruções para o uso da base do adaptador de energia

Инструкции к основанию адаптера питания

Instrucciones de la base del adaptador de corriente

Güç Adaptörü Tabanı Talimatları

Turn the printer off and disconnect the power cable before you begin.

开始前，请先关闭打印机并断开电源电缆连接。

開始前，先關閉印表機並拔下電源線。

Éteignez l'imprimante et débranchez le câble d'alimentation avant de commencer.

Den Drucker ausschalten und vor dem Beginnen das Netzkabel abziehen.

Matikan printer dan lepaskan kabel listrik sebelum memulai.

Prima di iniziare, spegnere la stampante e scollegare il cavo di alimentazione.

시작하기 전에 프린터를 끄고 전원 케이블 연결을 해제합니다 .


Antes de começar, desligue a impressora e desconecte o cabo elétrico.

Прежде чем начать, выключите принтер и отсоедините шнур питания.


Apague la impresora y desconecte el cable de alimentación antes de comenzar.

Başlamadan önce yazıcıyı kapatın ve güç kablosunu prizden çekin.


1

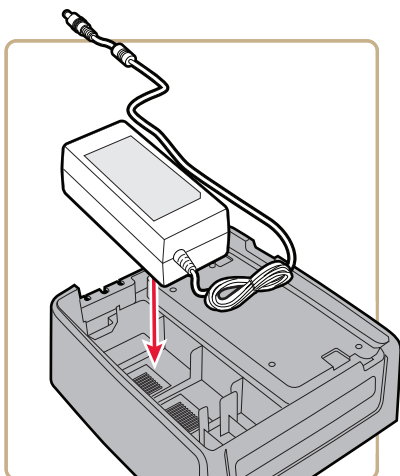


2

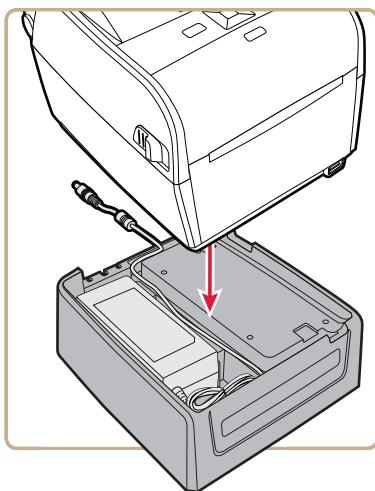


3

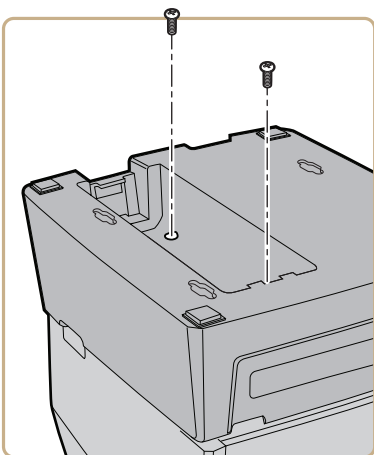

4

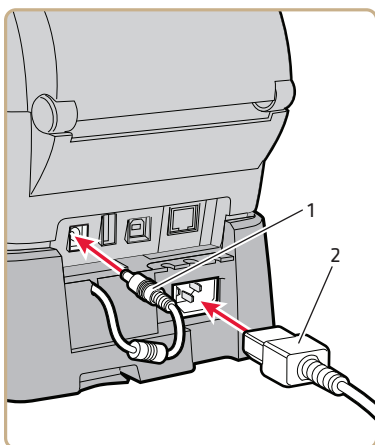

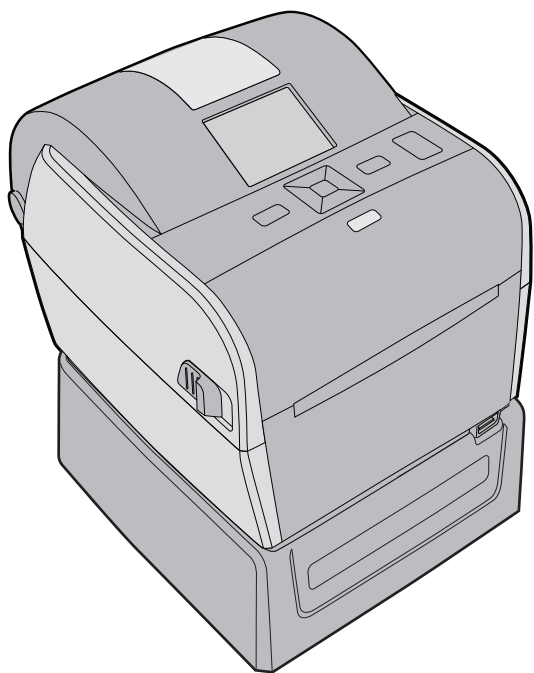



Worldwide Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2011 Intermec Technologies
Corporation. All rights reserved.



PC43d Power Adapter Base Instructions



P/N 943-319-001